Hand dryer Troubleshooting Guide Speedflow – M06A



What to do if hand drier....

- does not work
- runs continuously (non stop)
- presents a wrong performance
 - ...running "on and off"
 - ...blowing "cold air"
 - ...giving a weird noise
 - ...only works heating element becoming red-hot
 - ...giving a low blow
 - ...presenting sparks


These tasks must be performed by a qualified technician

mediclinics

Troubleshooting Guide **Speedflow – M06A**

mediclinics

Does not work




- Check that equipment is correctly plugged.
- Make sure it has the proper power.

Installation fault

No electricity

supply

Led sensor of ECU might be dirty



- Check if the cover fits well with the base fixed with the screws and without interfering with detectors.

- Check if all wiring connection to terminal block are OK.


- Make sure LED sensor visor is completely clean.


- Check coal motor brushes condition and make sure motor is working properly.

- Adjust detection distance in ECU turning the potentiometer.

- Check that any external object is blocking the rotor.
- Make sure that ECU is feeding the motor and any component isn't damaged.

Troubleshooting Guide Speedflow – M06A Dryer runs continuously (non-stop)

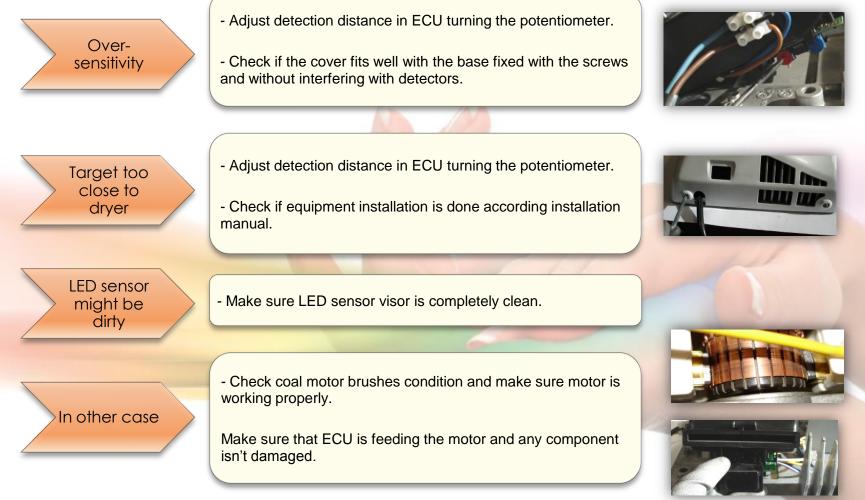

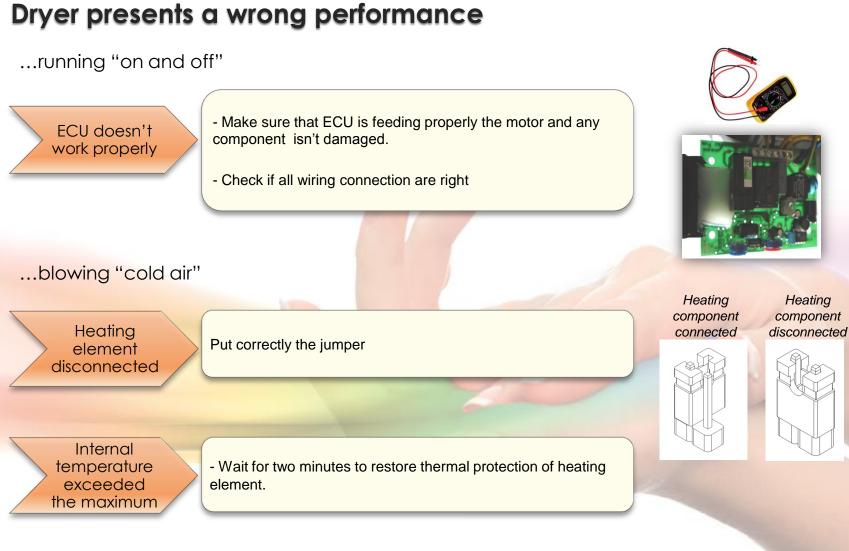


Troubleshooting Guide **Speedflow – M06A**



Troubleshooting Guide **Speedflow – M06A**


Dryer presents a wrong performance

...blowing "cold air"

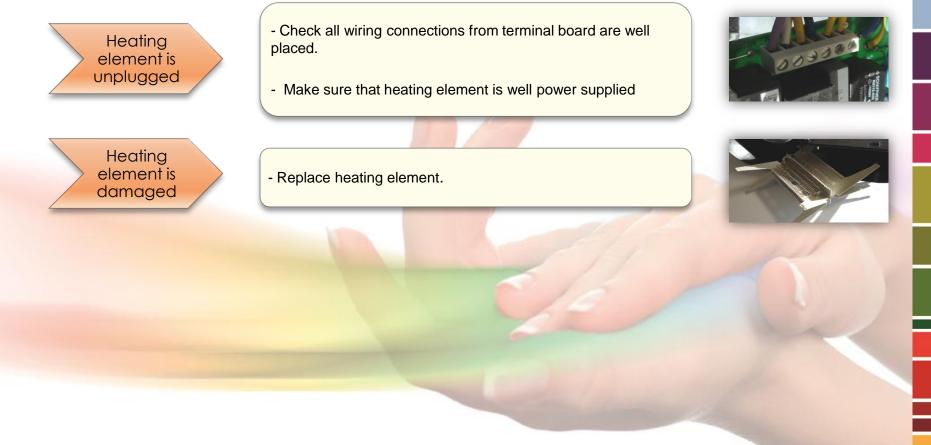

Troubleshooting Guide **Speedflow – M06A Dryer presents a wrong performance**


...giving a weird noise

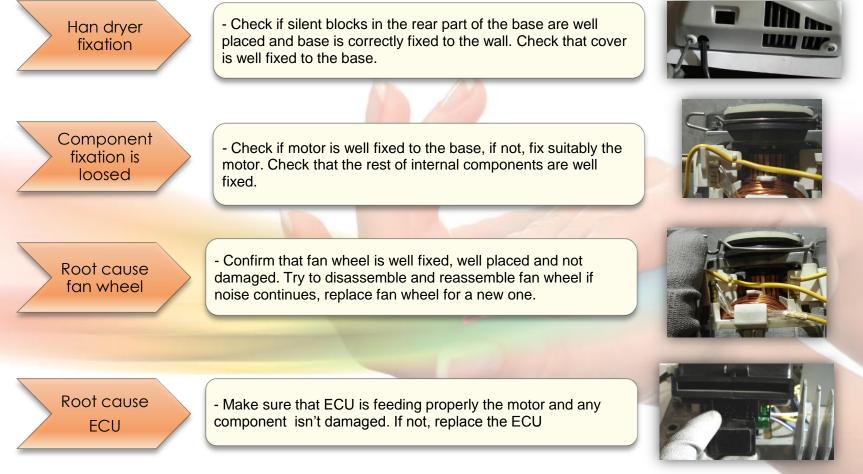

mediclinics

Troubleshooting Guide Speedflow – M06A Dryer presents a wrong performance

...only works heating element becoming red hot

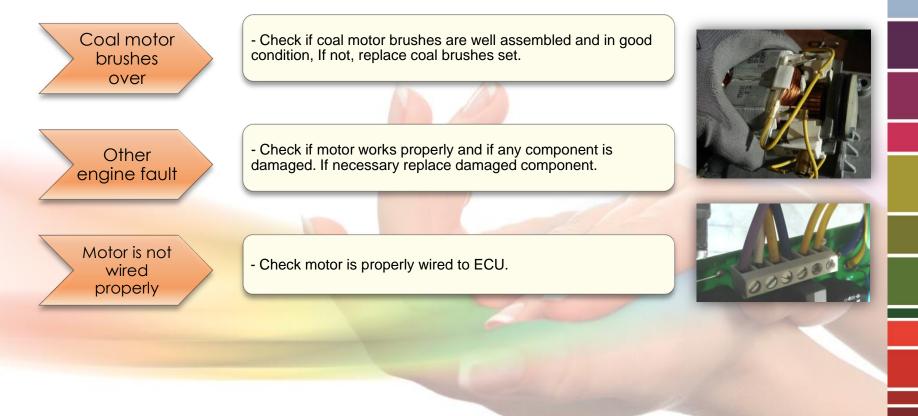


mediclinics

Troubleshooting Guide Speedflow – M06A

Dryer presents a wrong performance

... giving a low blow

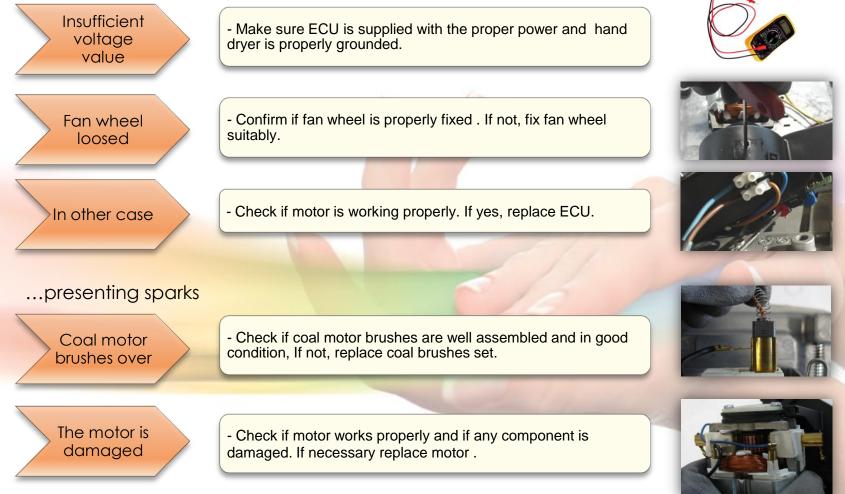



Hand Dryers and Washroom Accessories

www.mediclinics.com Skype: mediclinics